

WELDWOOD PLYWOOD A.I.A. FILE NO. 19-F

C O N S T R U C T I O N

DETAILS

A N D S P E C I F I C A T I O N S

NOVEMBER 1953

Architectural Grade
WELDWOOD®

P L Y W O O D P A N E L S

WELDWOOD PLYWOOD

A.I.A. FILE NO. 19-F



UNITED STATES PLYWOOD CORPORATION

WORLD'S LARGEST PLYWOOD ORGANIZATION

DETAILS

for Architects:

GUARANTEE

Weldwood Plywood for interior use is unqualifiedly guaranteed for the life of any building in which it is installed.

A Few Words of Explanation

This handbook has been prepared to provide architects and others with information relative to designing interiors using thicker panels of Weldwood® Plywood.

The details shown reflect standard procedures as used by cabinet shops and woodworking firms in producing fine installations.

The type of work outlined is not an exact science, since different woodworkers have their own special methods of achieving both standard and unusual effects. However, we have included the major points of general agreement as a guide for your convenience.

We hope you will find this handbook of value and that you will feel free to call on our Architects' Service Department for any additional information.



INDEX

Chart of Veneer Characteristics	8, 9
Contraction and Expansion	21
Corners	16, 17
Curved Panels	19, 20
Custom Stile and Rail	27, 28
Dry Bending Radii	31
Elevations	13
Finishing	29
Fireproofing	23
Furniture Details	25, 26
Furring	14
Grades and Types	3, 4
How To Specify Job	30
Panel Construction	11
Panel Joints	15, 18
Panel Layouts — Counterfronts	24
Panel Sizes — Shop vs. Site	22
Room Paneling	12
Types of Cuts	5
Veneer Characteristics	6, 7
Veneer Matching	10
Weldwood Plywood by Wood Species	31

PLYWOOD FOR ARCHITECTURAL INSTALLATIONS

United States Plywood Corporation offers the architect a great many varieties of plywood in many sizes and constructions. Briefly, the different classifications of decorative hardwoods are:

1. Algoma grade plywood — In thicknesses of $\frac{1}{8}$ ", $\frac{1}{4}$ ", $\frac{5}{16}$ ", $\frac{3}{8}$ ", $\frac{1}{2}$ ", $\frac{5}{8}$ " and $\frac{3}{4}$ " in veneer construction and $\frac{3}{4}$ " thick lumber core construction. This is our top grade stock hardwood panel.
2. Architectural plywood — sequence matched sets and custom made panels. These are of similar Algoma quality, but with the added advantages shown below.
3. Craftsman grade plywood — $\frac{1}{4}$ " thick in Birch, Oak, Walnut, and Korina. This panel is an economy grade hardwood panel.

This handbook will concern itself with the thicker panels, the three types listed below. For information on the other thicknesses and grades consult page number 31 of this handbook and the "Weldwood Catalog" which contains a listing of plywood products manufactured and distributed by United States Plywood Corporation. For installation data on the $\frac{1}{4}$ " thick grades write for the "Weldwood Plywood for Interiors — Installation Booklet".

A. Architectural Sequence Matched Sets

($\frac{3}{4}$ " thick Algoma grade lumber core construction)

These sets are carried in stock in approximately 18 different woods as follows:

Quartered Sliced Figured Mahogany	Figured Walnut
Mottled Mahogany	Plain Sliced Walnut
Mottled Figured Mahogany	Quartered Walnut
Figured Mahogany	Avodire
Fiddle Back Maple	Figured Avodire
Figured Quartered Maple	Brazilian Rosewood
Oriental Wood	Teakwood
Prima Vera	Zebrawood
Korina®	Basswood Core Stock (for special veneering)

These panels vary from the stock Algoma grade in that they are faced with specially selected veneers which reflect unusual character and quality. The faces and crossbands of these panels are bonded with phenol formaldehyde waterproof resin glue. The sizes usually made are 4' widths and 6', 7', 8', 9', 10', 11' and 12' lengths depending upon the lengths of veneer available. Sets normally consist of between 10 and 30 matched and numbered panels.

Surplus length of veneers are frequently made into companion counterfront pieces.

1. Fireproof core construction — Also carried in stock are some 48" x 96" matched sets with fireproof core construction for use where local building codes demand this type construction. These come in such woods as Birch, Plain Sliced Walnut, Quartered Walnut, Mahogany, Rift Oak and Figured Korina in either veneer or lumber core construction.

*Something new
expected to
fulfill a
long-felt
need*

B. Algoma Grade, Stock $\frac{3}{4}$ " Thick Lumber Core Plywood


The sizes carried in stock are 36" and 48" widths by 60", 72", 84", 96" and 120" lengths, and panels can be obtained in many different woods. The smaller sizes of panels are always available at substantial saving and should be used where possible. In Walnut and Korina, sequence-matched, numbered panels are kept in stock.

Counterfronts are available in this grade with sizes ranging from 144" x 28", 144" x 36", 144" x 42" and 144" x 48". Counterfronts also come in veneer core construction in sizes 96" x 48" and 120" x 48".

C. Architectural Custom Built Panels

The construction employed is the same as the architectural sequence matched sets, but in custom work the architect selects the veneer flitch and the panels will be manufactured to the sizes he desires, the only limitations being those imposed by the lengths and widths of the particular veneer selected. This type of "to order" panel naturally is somewhat more costly due to production cost and veneer loss. Time, depending on circumstances, must be allowed in which to make veneer selection and have this veneer manufactured into plywood (refer to "Veneer Chart" pages 8 and 9).

*It is common practice to indicate height and grain direction in the second dimension:
Example:
96" x 48" - a panel 48" high vertical grain*

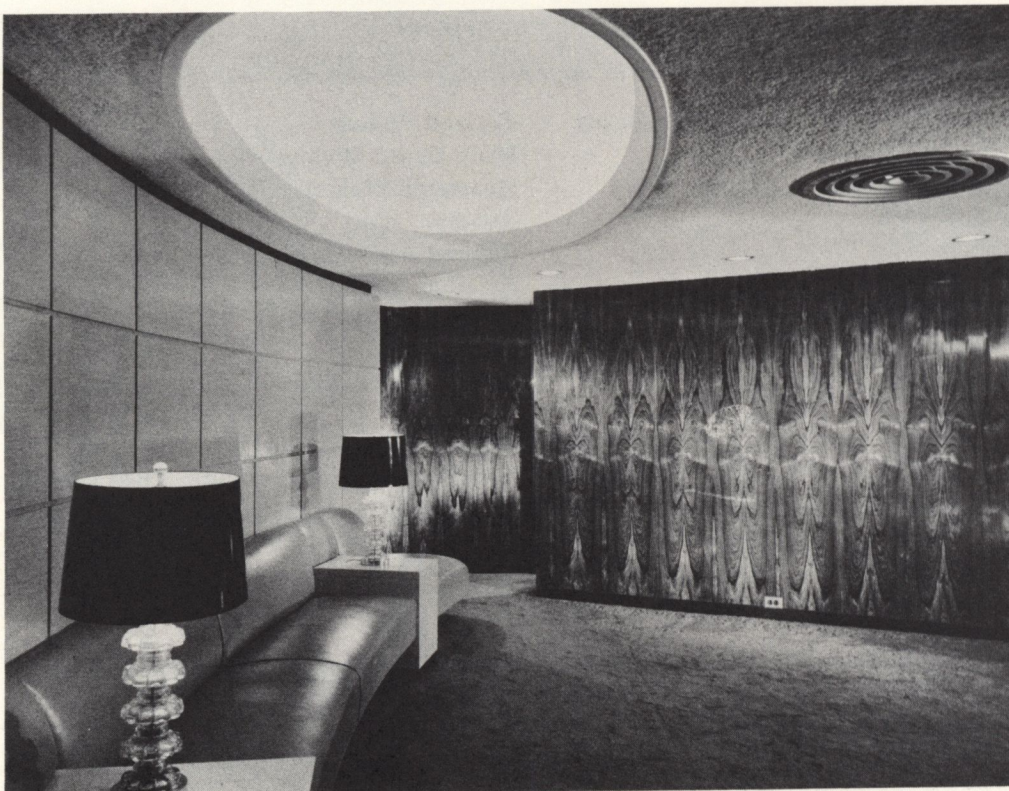

The Rosewood Ballroom Reception Room
(Arthur Murray)
East 43rd St., New York City
Architect: Morris Lapidus
General Contractor & Millworker:
M. Gerber Construction Co., Inc.

TYPES OF VENEER CUTS



The manner in which veneers are cut is an important factor in producing the various visual effects obtained. Two woods of the same species, but with their veneers cut differently, will have entirely different visual character even though their color values are similar.

In plywood manufacture, six principal methods of cutting veneers are used, depending on the type of veneer required, (whether for face, crossband, or core) the nature of the log and the veneer figure desired. Primarily the veneer slicer and veneer lathe are the equipment employed. The six methods are:

1. Rotary cutting
2. Plain or flat slicing
3. Quartered slicing
4. Half-round slicing
5. Back-cut
6. Rift-cut

Rotary



The log is mounted centrally in the lathe and turned against a razor sharp blade, like unwinding a roll of paper. Since this cut follows the log's annular growth rings a bold variegated grain marking is produced. Rotary cut veneer is exceptionally wide.

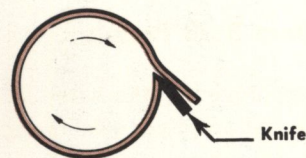

Rotary

Plain Slicing (or flat slicing)



The half log, or flitch, is mounted with the heart side flat against the guide plate of the slicer and the slicing is done parallel to a line through the center of the log. This produces a variegated figure.

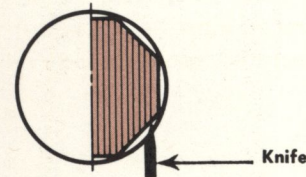

Plain Slicing

Quarter Slicing


The quarter log or flitch is mounted on the guide plate so that the growth rings of the log strike the knife at approximately right angles, producing a series of stripes, straight in some woods, varied in others.

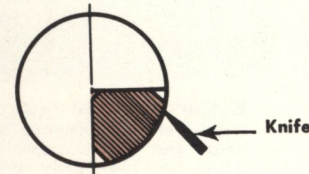

Quarter Slicing

Half-Round Slicing


A variation of rotary cutting in which segments or flitches of the log are mounted off center in the lathe. This results in a cut slightly across the annular growth rings, and visually shows modified characteristics of both rotary and plain sliced veneers.

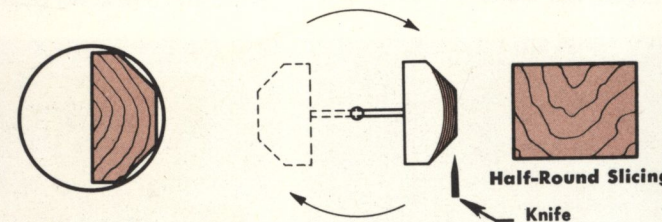

Half-Round Slicing

Back-Cut


The flitch is mounted as in half-round cutting except that the bark side faces in towards the lathe center. The veneers so cut are characterized by an enhanced striped figure and the inclusion of sapwood along the edges.

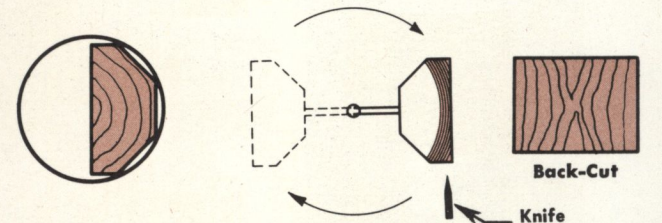

Back-Cut

Rift-Cut

Rift cut veneer is produced in the various species of Oak. Oak has medullary ray cells which radiate from the center of the log like the curved spokes of a wheel. The rift or comb grain effect is obtained by cutting perpendicularly to these medullary rays either on the lathe or slicer.

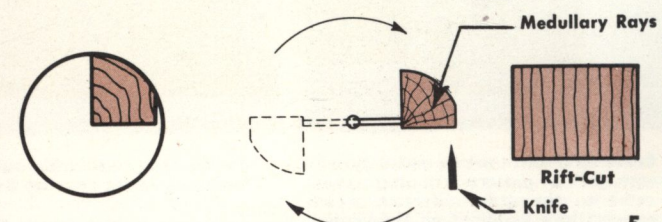


Rift-Cut

FIGURE CHARACTERISTICS OF VENEERS

The grain pattern and figure on the face of the veneer are of the utmost importance to the designer and architect, since the whole character of the completed installation may be determined by the choice of veneer to be used. Veneer men, in discussing figure in the wood, usually describe the characteristics of that figure by saying it "has a great deal of crossfire", or "has a straight or broken stripe" or is "highly figured". It should be borne in mind that "figure" refers to the highlights or crossfire running at right angles to the grain direction, whereas the grain character and direction would be described by using the word "pattern". The photographs below illustrate some of the most commonly used veneer terms.



Fiddle-Back—A fine, even, ripple or wave figure running at right angles to the grain direction of the veneer, and frequently seen on the backs of violins. It is found principally in Mahogany and Maple.

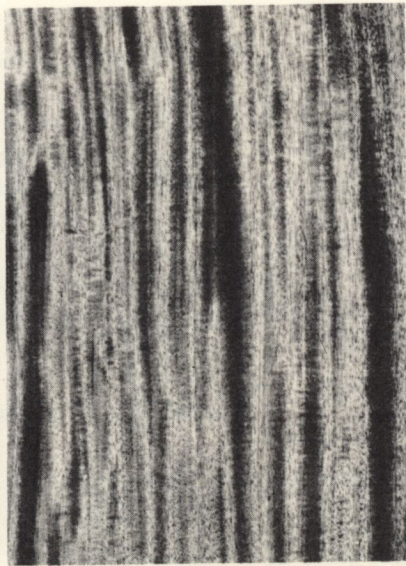

Ribbon Stripe—A wide unbroken striped effect, consisting of alternate light and dark strips, principally found in Mahogany produced by quarter slicing a log from a tropical tree with interwoven grain.



Flaked—A characteristic of Quartered Oak (formed by cutting across large medullary rays) and appearing as a highlight extending generally across the grain of the wood. Sometimes a breaking or loosening of the flake occurs, known as "broken-flaked."



Cross-Fire—An uneven undulation or corrugation pattern running transverse to the grain direction which appears as a highlight on the veneer.



Swirl—Irregular grain usually surrounding knots or crotches.




Mottle—Consists primarily of short, irregular, wavy surface fibres across the face of the panel. This gives a mottled look to the surface configuration.

HOW VENEER FIGURES ARE ACHIEVED

The marking or pattern in a piece of veneer is the result of tree growth. Quartered veneer shows a stripe produced by the light and dark color of Spring and Summer wood — the annular growth rings.

Spring wood is light in color (most pronounced in wood like Walnut), and the Summer wood is dark. In quartered veneer a striped effect naturally results from cutting at right angles to the growth rings. In flat-cut, half-round or rotary veneers, the variegated pattern is influenced by the angle at which the knife passes through the growth rings.

In tropical woods the demarcation of Spring and Summer wood may be scarcely noticeable because the tree growth is practically continuous.

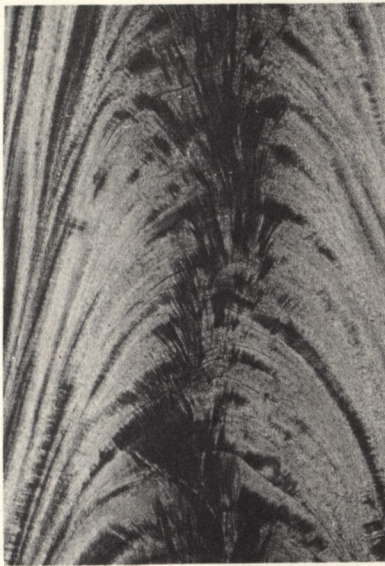


Crotch—A veneer cut from the crotch or fork where two large branches of a tree unite. The resulting figure is usually curly and flowery and sometimes resembles a well formed feather in appearance.



Burl—A type of figure produced by cutting through wart-like protuberances on trees. They contain the dark pith centers of a large number of undeveloped buds, which appear as little "eyes" or knots on the face of the veneer.



Blistered—Veneer appears to be blistered, due to seemingly knoll-like elevations in the wood. This is due to an uneven contour of the annual ring growth. Sometimes this is called "quilted figure."

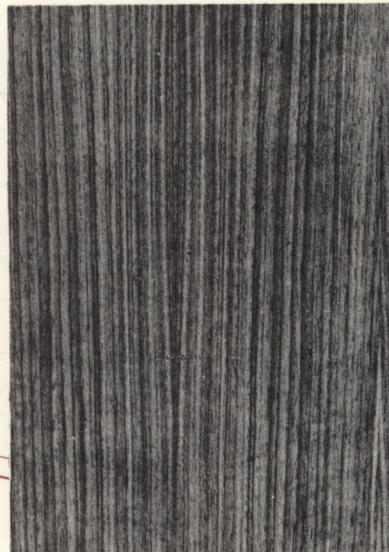

Pencil Stripe—Similar to ribbon stripe, except that the alternate light and dark strips are narrower in width. An example of this is Walnut.



Stump (sometimes called Butt)—Veneers that are cut from the sound roots at the base of the tree, and having a rich, curly figure resulting from the intertwining of the root fibres.

CHART OF VENEER

There are at least 200 different woods in general commercial use.



**CROTCH
or SWIRL**



BURL



**STUMP
WOOD**

Veneer	Texture	Color
Avodire	Medium hard	Light yellow
Avodire, Figured	Medium hard	Light yellow
Birch, Select Red	Very hard	Light to dark brown or reddish-brown
Bubinga	Hard	Pale to deep flesh with thin purple lines
Butternut	Soft	Pale brown
Cherry, American	Medium	Light to dark reddish-brown
Elm, Quartered American	Medium	Light brownish red with dark brown ring marks
Gum, Figured Red	Heavy and strong	Pink to reddish-brown
Harewood, Grey	Medium hard	Silver grey (dyed) or cream to white (undyed)
Korina, Figured	Medium	Golden blond
Lacewood	Soft to medium	Pink to light leather brown
Macassar Ebony	Hard	Rich black-brown with tan, orange or yellow markings
Mahogany, Figured Quartered	Medium	Red to red brown
Mahogany, Honduras	Medium	Yellowish-white, salmon pink to rich golden brown
Mahogany, Mottled	Medium	Salmon pink to rich golden brown
Mahogany, Mottled Figured	Medium	Red to red brown
Mahogany, Philippine	Soft	Pale pinkish yellow to dark reddish-brown
Mahogany, Ribbon Striped	Medium	Red to red brown
Makore	Fine—smooth surface	Pale pinkish brown to dark reddish or purplish brown
Maple, Figured Quartered	Very hard	White
Oak	Hard	Red or white
Oak, English Pollard	Medium hard	Nut brown to deep brown with black spots
Orientalwood, Figured	Hard	Brown to gray—may have pink streaks or all over pinkish cast
Paldao	Hard	Variable tan background with black to brown streaks
Prima Vera, Figured	Medium	Yellow white
Rosewood, Brazilian	Hard	Dark red
Rosewood, East Indian	Hard	Straw to dark red
Sapeli	Medium hard	Medium to dark brown
Satinwood, East Indian	Hard	Light yellow
Teak, Plain and Figured	Medium hard	Golden brown
Walnut, Claro	Medium	Light to rich brown
Walnut, French	Soft	Grey
Walnut, Figured	Hard	Brown
Walnut, Flat Sliced	Hard	Brown
Walnut, Quartered	Hard	Brown
Zebrawood	Hard	Alternating stripes of dark brown and tan

CHARACTERISTICS

We list some of the more important.

Figure	Origin	Veneer Length Range	Remarks
Strong, broken rope	Africa	Long	
Strong with heavy crossfire	Africa	Long	Carries heavy figure
Plain	U. S. A.	Medium long	Can get curly in qtd. and flat sliced
Straight or broken stripe, mottle or shell	Africa	Long	Rare color—straight narrow lines
Satiny—resembles grain of American walnut	U. S. A.	Medium long	Scarce
Varies from plain to rich mottle	U. S. A.	Rotary cut—short, plain or quarter sliced—medium long	A few burls, crotches, and swirls
Strong	U. S. A.	Long	Northern Elm has finer, more uniform texture than Southern Elm
Wild with pleasing color contrast	U. S. A.	Short	Ribbon stripe obtained by quartering
Plain, curly, fiddleback, finger roll with heavy crossfire	England	Medium long	May be successfully dyed
Stripe and crossfire	Belgian Congo	Long	Rich satin-like wood available in good length, width and uniform color
Small to large flake	Australia	Long	Uniform color
Contrasting stripes	Dutch East Indies	Medium	Heavy dense wood
Striped with some crossfire	Africa	Long	Great variety of figure including crotch
Straight grained moderate crossfire to rich mottle	Central & South America	Long	Flat sliced—good widths and lengths
Broken and crossfire	Africa & Cen. America	Long	
Broken stripe and crossfire	Africa	Long	Great variety of figure including crotch
Plain	Philippines	Long	Good lengths and widths
Wide stripe	Africa	Long	Great variety of figure including crotch
Plain—sometimes mottled	Africa	Long	
Mild	U. S. A.	Medium long	Obtainable in sliced and rotary
Plain	U. S. A.	Rotary or half round white—short other cuts—long	Has prominent medullary rays, rift cut to give comb grain
Plain or streaked with flake, tortoise shell	England	Medium	
Strong, distinctive figure. Stripe	Australia	Long	Brilliant clear stripe sometimes has pronounced crossfire
Stripe and mottle	Philippines	Long	Some crotches
Stripe and crossfire	Central America	Medium	Rich, satin-like wood
High flower, dark and light	Brazil	Long	Often cut rotary or half-round, producing beautiful effects
Stripe	East Indies	Long	Often cut rotary or half-round, producing beautiful effects
Pronounced stripe	Africa	Long	
Stripe and flower	East Indies	Medium long	The true satinwood
Plain, ripple, mottle	India	Long	Durable, strong, moderate weight, easy to work
Wide black banding, plain mottle, wavy	U. S. A.	Short	Crotches, veneers may carry yellow sapwood
Fine, smooth grain	France	Short	Specially beautiful burls
Highly varied	U. S. A.	Medium	Known as high class cabinet wood with beautiful finishing qualities
Highly varied	U. S. A.	Medium	
Highly varied	U. S. A.	Medium	
Stripe	Africa	Long	Rich color, straight stripe, and delicate markings

VENEER MATCHING


As a log segment is cut, the series of resulting veneer sheets is called a flitch. All the veneers in this flitch are kept in sequence as they come off the cutting lathe or slicer, so that they may be matched and joined to make panel faces.

The joining of the veneers is accomplished by means of a "tapeless splicer" which glues the long edges of the veneers together in whatever pattern is to be used.


There are at least ten standard matching patterns possible, but due to the greatly curtailed panel yield per flitch, increased labor involved, and generally more exacting original veneer selection, only the book and slip matching are normally employed — the other methods being custom to order.

Book Match

All types of veneers are used. In book matching, every other sheet is turned over just as are the leaves of a book. Thus, the back of one veneer meets the front of the adjacent veneer, producing a matching joint design. Panels are made up of an uneven number of flitches in this type of matching.

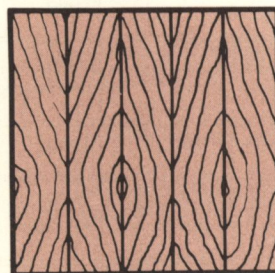


Called center match when two flitches make a panel, joint falling in the center

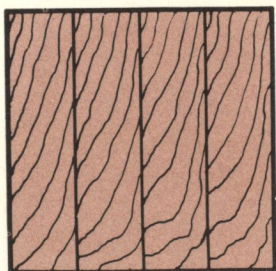


Slip Match


In slip matching, veneer sheets are joined side by side and convey a sense of repeating the flitch figure. All types of veneer may be used, but this type of matching is most common in quarter-sliced veneers.

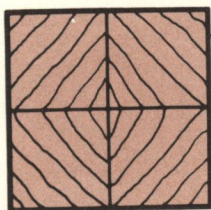


Diamond

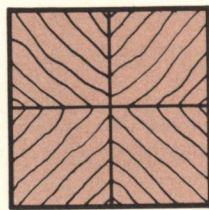


Reverse Diamond

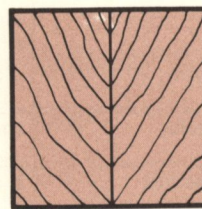


"V"

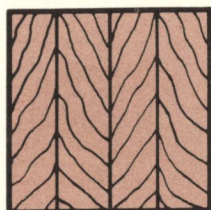


Herringbone

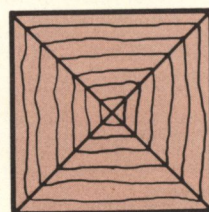


Box

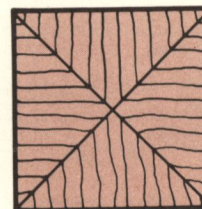

Reverse Box

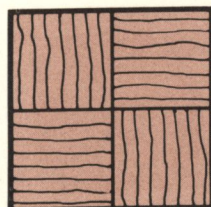

Checkerboard

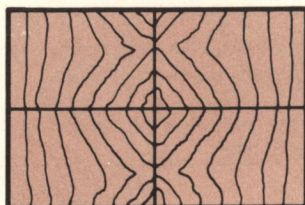


Four-way Center and Butt

This type of match is ordinarily applied to Butt, Crotch or Stump veneers, since it is the most effective way of revealing the beauty of their configurations. Occasionally flat cut veneers are matched in this manner where panel length requirements exceed the length of available veneers.


PANEL CONSTRUCTION — ARCHITECTURAL

There are different types of panel construction, designed to do different jobs. However, this handbook will limit itself to those constructions usually employed in top grade architectural work.

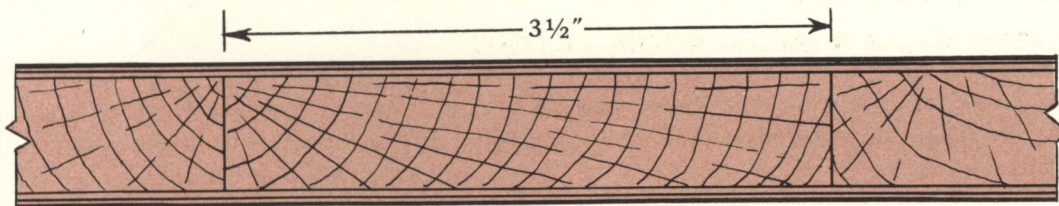


LUMBER CORE CONSTRUCTION

This type of construction is the cabinetmaker's standby, and consists of a heavy core of sawn lumber with crossbanding and face plies. The heavy lumber core permits doweling, splining and dovetailing. Face veneers are $\frac{1}{28}"$ thick. Crossbands are $\frac{1}{16}"$ and are of Basswood or Poplar. Woods of uniform texture such as Bass and Poplar are preferred for the core. The cores normally consist of $3\frac{1}{2}"$ or less strips made from $\frac{4}{4}$ lumber, cut to suitable length, edge glued and clamped until the glue has set. The strips are then placed in a High Frequency Core Gluing Machine where the resin glue of the core strips is cured electronically without inducing excess moisture into the carefully kiln dried lumber. All Algoma grade is hot plate resin glued.

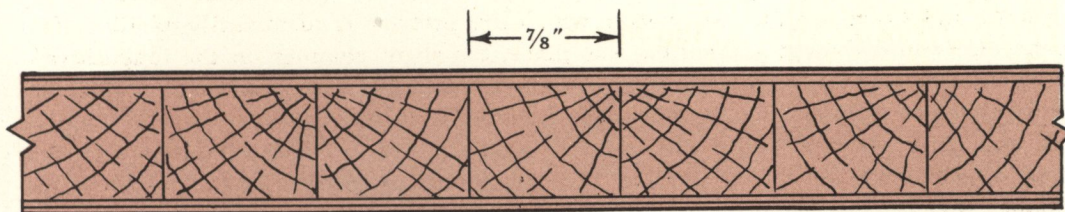

COUNTERFRONT CONSTRUCTION

Basically, this construction follows that of lumber core, but with certain important changes. These panels, installed horizontally with the face grain revealed vertically are subject to unusual stresses. The lumber is planed to $\frac{7}{8}"$ thickness, then gang ripped to a width equivalent to the core thickness. These lumber strips are then set on edge like "Stave Core" construction. All of the strips are really turned at right angles to their original position in the board. This reduces the warping tendency that is present in solid lumber. Also the panel is especially stable due to the loose core construction. The crossbands are $\frac{1}{16}"$ thick and all crossbanding is full length as a 150" lathe for rotary cutting veneer in 12' lengths is used. This eliminates the necessity of scarfing.

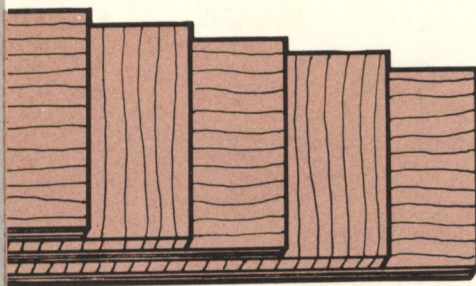

VENEER CORE CONSTRUCTION

Faces, crossbands and core veneers are always laid in odd numbers such as 3-ply, 5-ply and 7-ply, the faces being $\frac{1}{28}"$ thick and the crossbands $\frac{1}{16}"$ thick. The grain directions of adjacent plies are generally at right angles to each other. This plus the fact that a number of plies are used for this construction contribute to the fact that there is normally less contraction and expansion in this panel.


This is a standard method of plywood construction which is less costly but which cannot be doweled as easily as lumber core. If panel edges are exposed, the end grain of the plies is revealed.

LAYING OUT THE JOB, BASED ON A TYPICAL ROOM LAYOUT

The accompanying sketch shows a typical room layout in plan and elevations and a selection of joint treatments at corners and walls that could be used to work out the paneling scheme.

One of the first things to determine in laying out a room, is the *widths* of the panels to be used. If architectural sequence matched stock sets are to be used, a 4 foot width will be the width dimension most frequently specified (see page 3). This means that since the grain of the wood follows in faithful sequence from one panel to the next, certain care must be taken in planning so that cutting of panels is kept to a minimum. For instance, if a fireplace is located along one elevation, it would be wise to locate a panel directly on the center line of the fireplace and work the remaining panels to the left and right so that any cutting of panel widths would occur in the corner of the room, a less noticeable spot.

Assuming a flush treatment is planned, the question which often arises is how to get the last panel in when both ends of a wall are "locked in" to the adjacent walls. Figures #1 and 2 demonstrate two ways in which this problem is customarily handled. The panels are simply bowed and sprung into place, the slight chamfer on the tongues (see drawing) being of help in achieving this. When this method is used, panels are nailed top and bottom as shown in sketch "B", page 18. Nailed areas are then covered with a molding and base board. Actually the architect need not overly concern himself with this type of problem since it is in handling such procedures as this that the high skill of the quality woodworking shop makes itself felt.

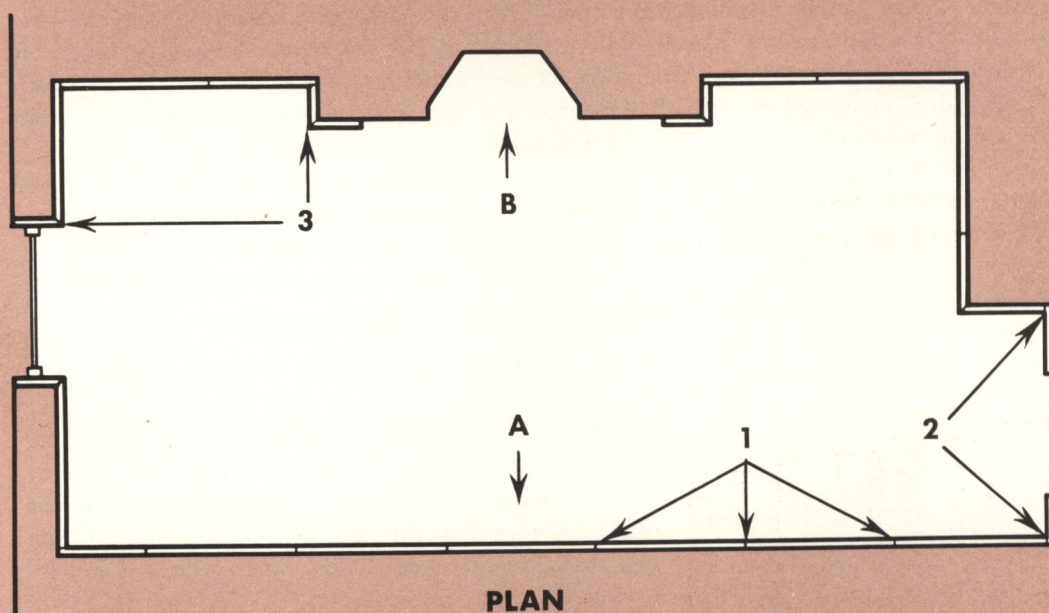


1—Panel joint

2—Inside corner joint


3—Outside corner joint

ELEVATION WALL A

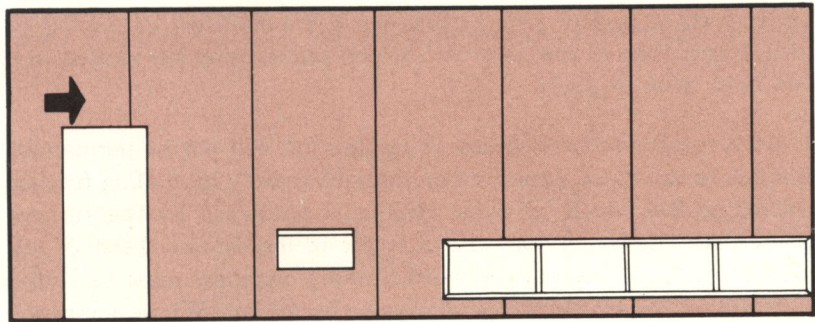

Panels start from one end and follow along wall in sequence.

ELEVATION WALL B

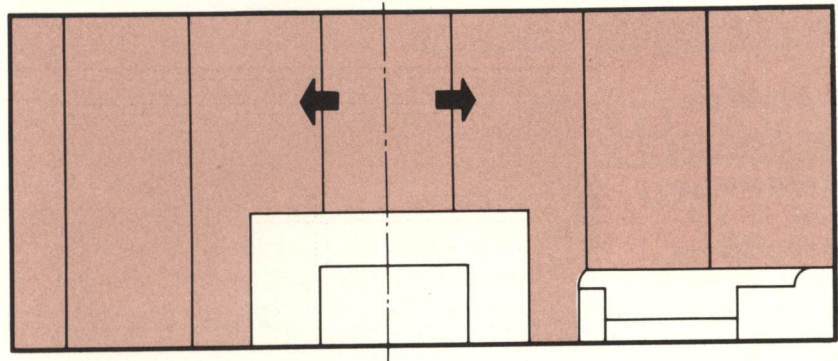

A panel is located over fireplace with rest of panels working in sequence to the left and right. Some cutting may be expected when reaching the corners of the room.

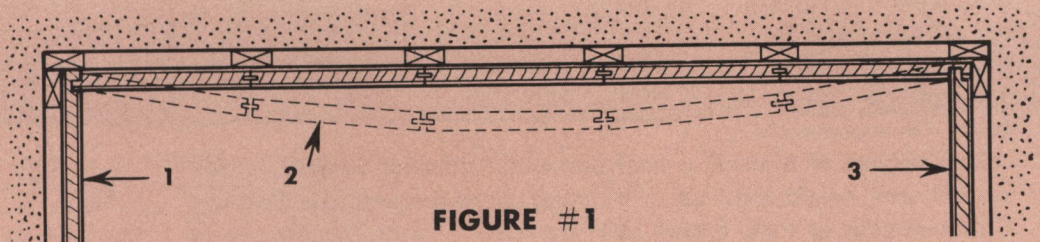


FIGURE #1

The adjacent wall #1 is installed first. Then the wall panels #2 are pre-assembled in a bow shape a few inches out from the wall with the tongues and dowels lightly meeting. The whole wall section is then sprung into place. Wall panel #3 can then be installed.

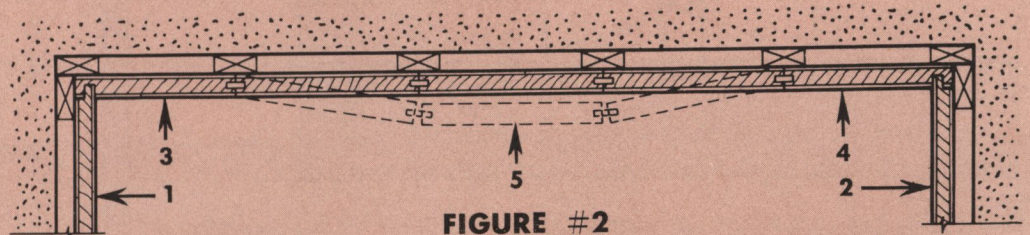


FIGURE #2

In this method it is assumed, that for construction reasons walls #1 and 2 had to be installed first. Panels #3 and 4 would then become a part of walls #1 and 2 and installed together as one piece. Wall panels #5 would then be bowed and sprung in place in the manner outlined above.

This is no problem to the good woodworker

FURRING


A most important part of any installation is the studding or furring to which the panels attach. Regardless of the care with which panels may be jointed and fitted, the furring must hold them in place.

If this work is incorrectly designed or set, the job will not be permanently satisfactory. It is difficult to do a first-class workmanlike job merely by nailing furring strips to a wall and attaching the panels to them. Problems presented by the furring should be studied just as carefully as any structural factor in installation. First of all, the frame must be adequate in size. Intervals between framing members must be sufficient to support the construction. Panel edges must always be backed up. Where joints come between backing, grounds must be let in for nailing bases.


Care must be taken in leveling furring, otherwise walls will not be true and panel fastening may be under a strain.

Wall Elevation


The usual method of furring a wall is to run horizontal 1" x 2" strips, usually Spruce, across the wall, and 1" x 2"s let in vertically where panel joints occur. One horizontal member is located at the base and one at the ceiling. A third horizontal member is located at chair rail height (between 30" to 36" from floor). On rooms with ceiling heights of 8' or 9', a final horizontal member located at "extended arm" height (approx. 5'-0" plus), provides adequate framing. Cut steel nails or rosin coated nails are used for attaching furring to plaster. At the base, soldiers are usually employed for the attachment of the base board. These members are located 1' or 2' on centers.

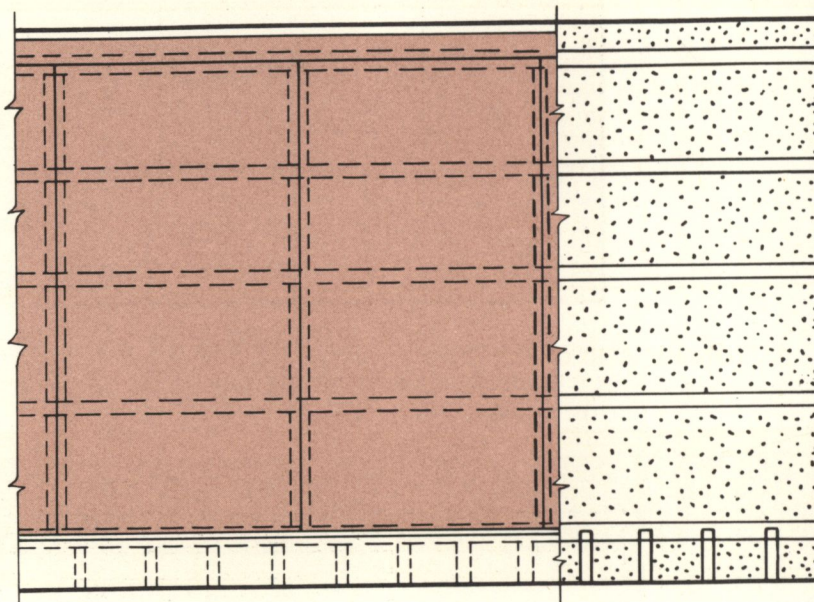

*When in doubt
use furring
on 3' centers*

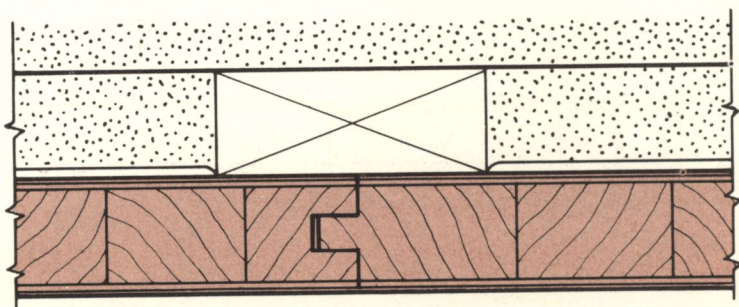

Many city building codes (including the City of New York) require that the furring be encased on three sides, set in the plaster, or, on new construction, that rough plaster be troweled in and made flush with the furring. This is to prevent flue action resulting from the air space between panels and wall.

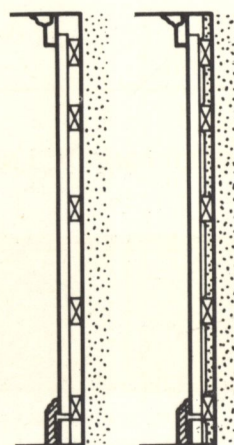


Applied


Flush

JOINTS


Although there are many ways of joining panels together, the test of time has shown certain generally accepted methods. All other joint treatments become variations on these original concepts.

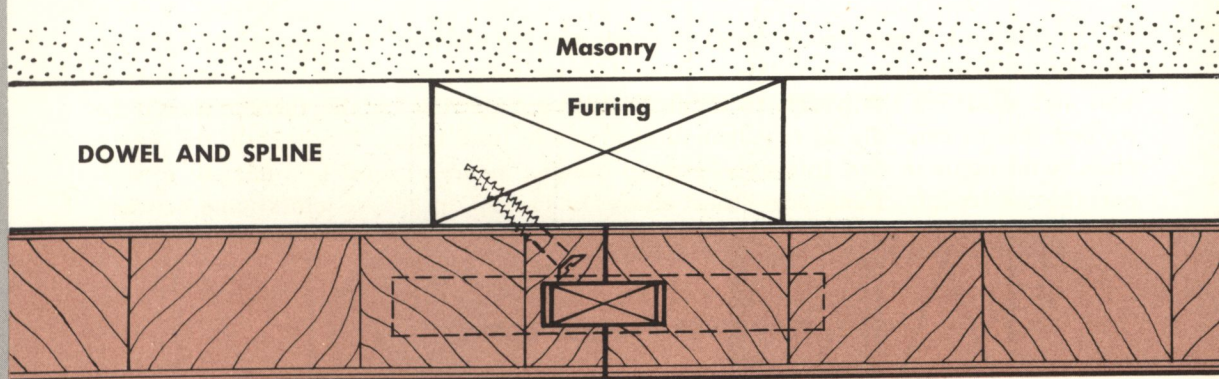


This joint is the most universally used in joining panels. The spline, usually about $\frac{1}{4}$ " thick and $\frac{5}{8}$ " wide, is continuous and is often made from plywood. The dowels are on centers anywhere from 6" to 12". Usually #7 or #8 spiral dowels are used.



Dowel

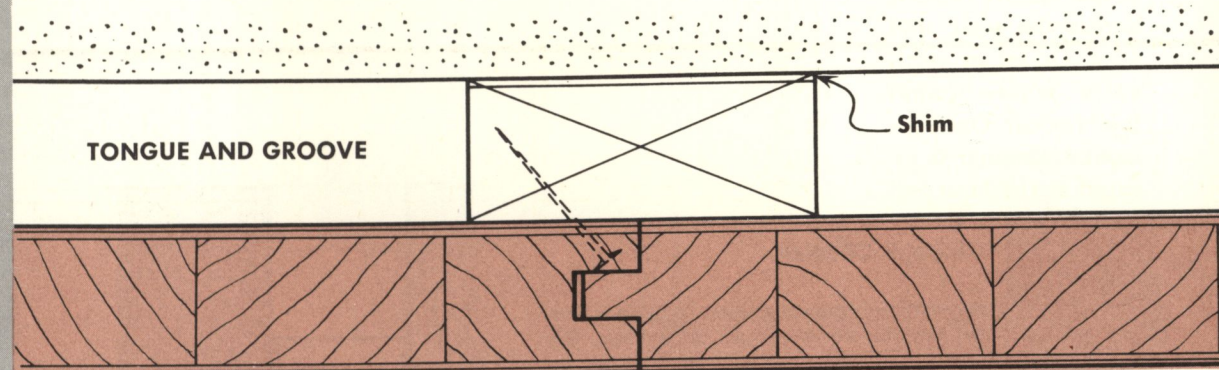


This joint is a standard preferred treatment. The tongue is usually $\frac{1}{4}$ " wide and approximately $\frac{5}{16}$ " deep. For use when bowing panels into place, the sides of the tongue are chamfered slightly. The groove is always made slightly larger than the tongue. Often dowels are added as well to provide extra joint security.

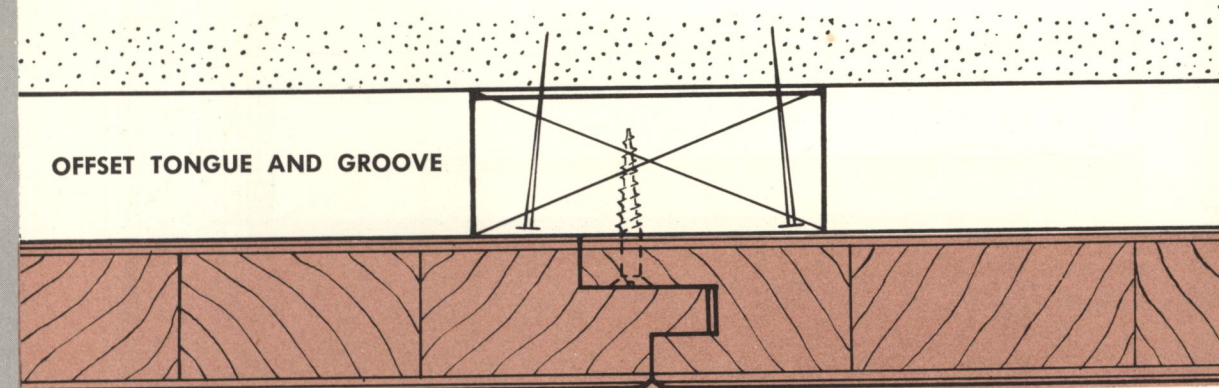

This is a variation of the tongue and groove that more easily permits the nailing or screwing of the panel to the wall. However, it is more painstaking in manufacture.

Shim to level furring where necessary

"Vee" joint shown achieved by sanding through veneer only

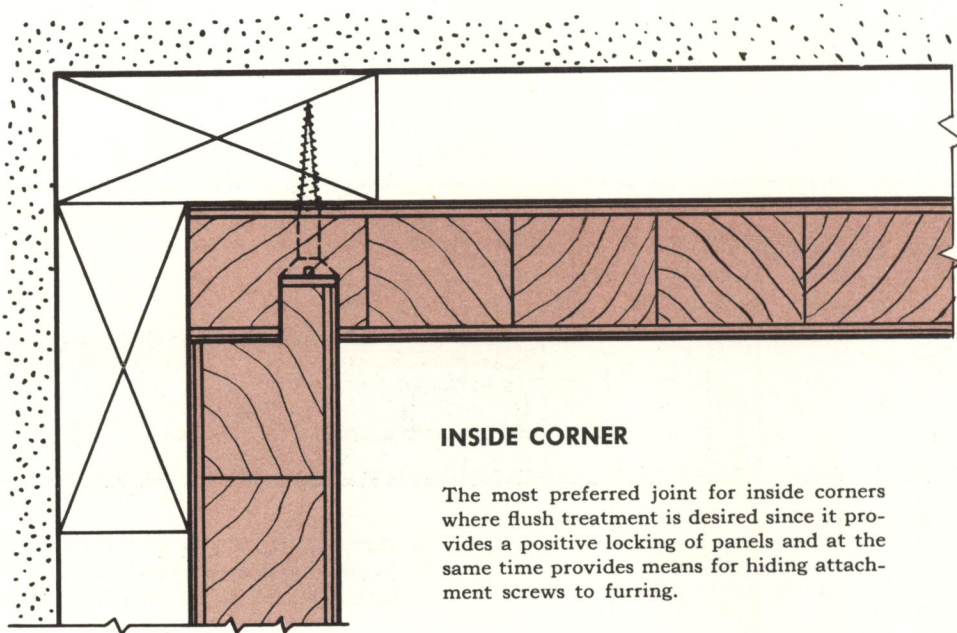


INSIDE CORNER


The most preferred joint for inside corners where flush treatment is desired since it provides a positive locking of panels and at the same time provides means for hiding attachment screws to furring.

OUTSIDE CORNER

Where it is desired to achieve a clean corner with no corner blocks or molding, this tongue and mitre is usually used. It has the advantage over a regular mitre in that it only needs glue clamping pressure from one direction instead of two. The tongue portion should be kept somewhere near the sizes shown so as to avoid any possibility of weakening the wood at this spot.

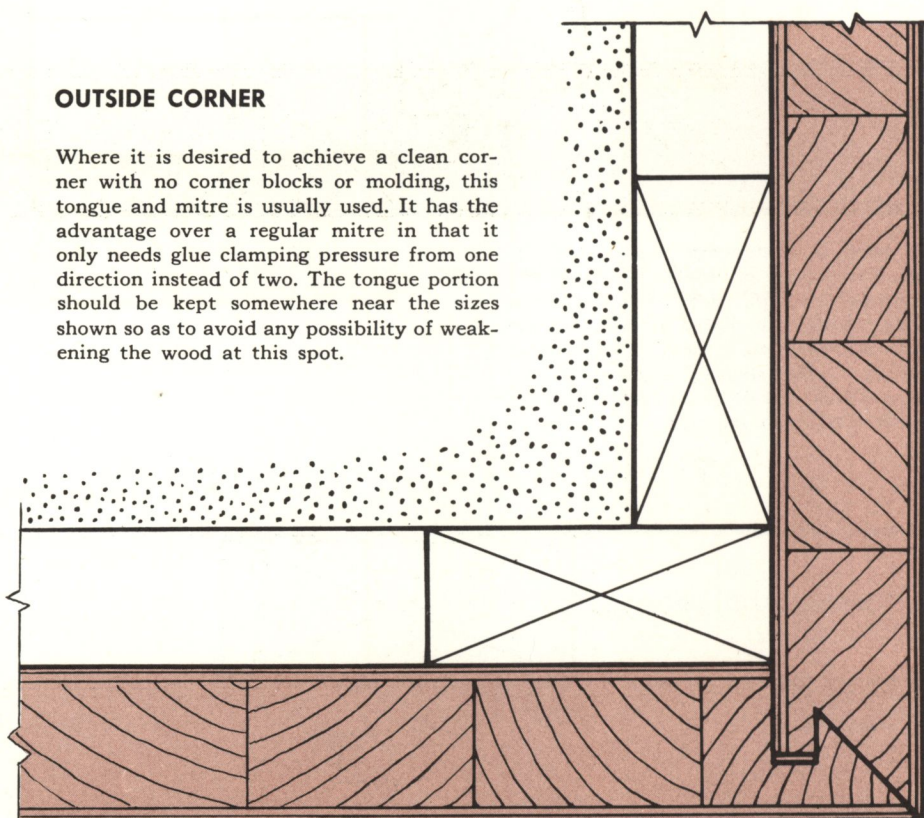

*Often used
in furniture
constructions,
too.*


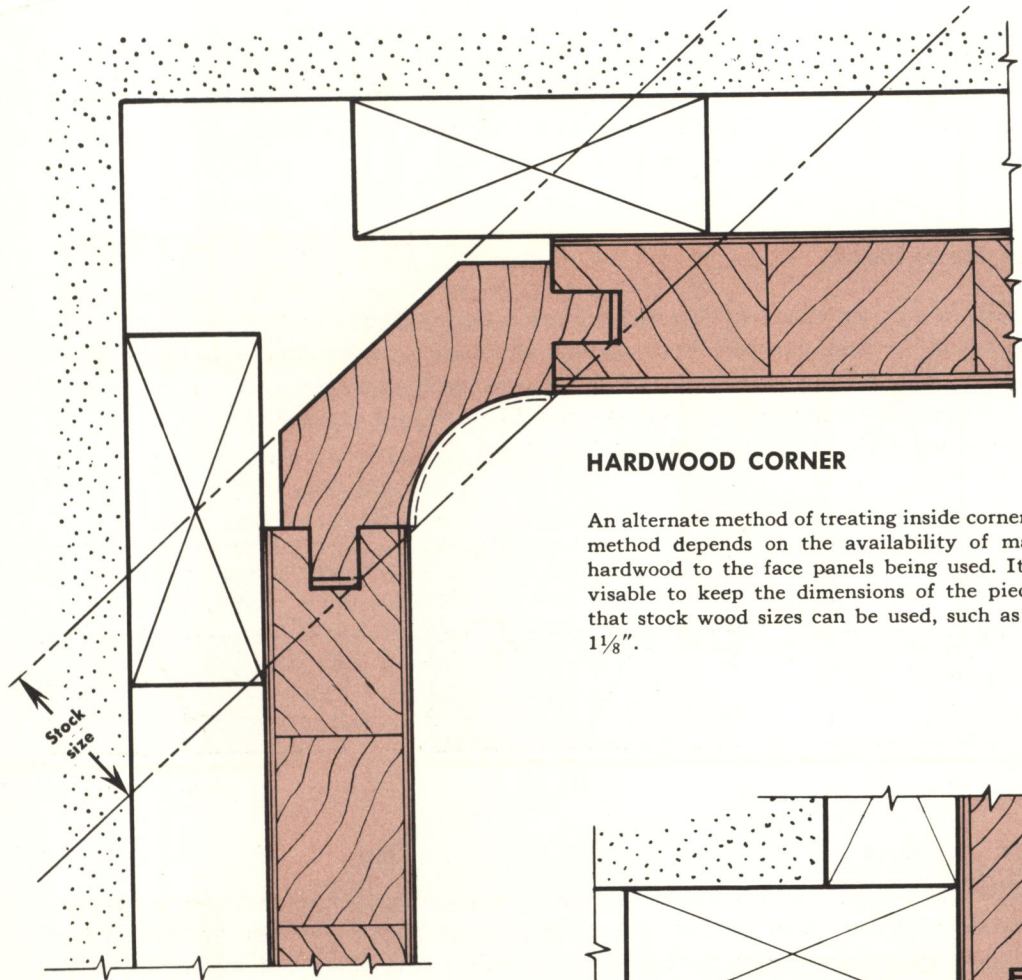


HARDWOOD CORNER

An alternate method of treating inside corners. This method depends on the availability of matching hardwood to the face panels being used. It is advisable to keep the dimensions of the piece such that stock wood sizes can be used, such as $\frac{7}{8}$ " or $1\frac{1}{8}$ ".

HARDWOOD CORNER

Outside corner handled in the same manner as inside corner.

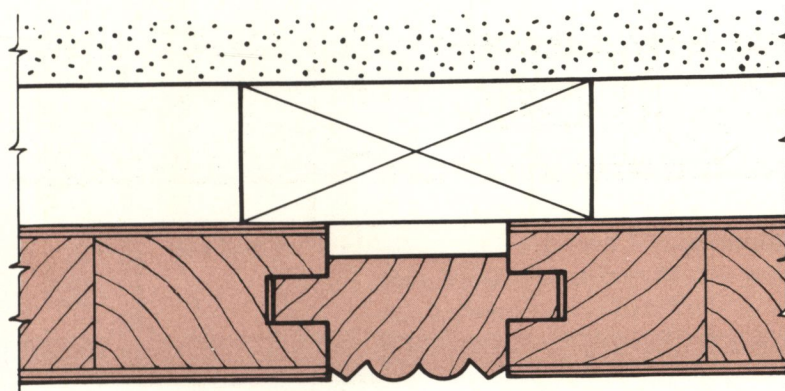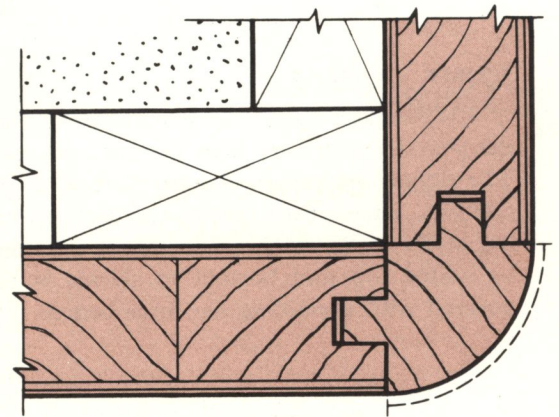

DECORATIVE BATTENS


No matter what form the vertical batten may take, it is wise to provide solid tongues for interlocking with adjacent panels. The illustration shows a good example of this.

NAILS, SCREWS

Both screws and nails are employed for fastening panels to furring strips. As a general rule screws, hidden by the joints, are preferred, since they allow for panel removal where necessary. Screw sizes are usually #10 or #12.

Proper Use of Nails


Nails also do an excellent job and are often desirable due to their small diameter when working in close quarters. Face nailing, although to be avoided if possible, is not undesirable when handled intelligently. Nails can be installed diagonally for better locking effect by using the same face hole. (see sketch) The nails are countersunk, of course, and the holes filled with wood putty of matching color.

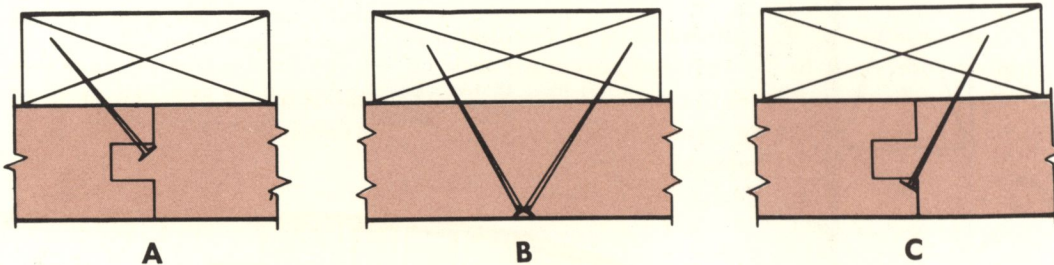

Panels can go directly on studs in new wood construction

JOINT CLAMPS

Where very long runs of walls are indicated ranging between 40 or 50 feet, it is often the practice to utilize joint clamps and assemble three panels together by this method. The panels are prepared with clamps in the woodworking shop and assembled at the job site. These three-panel-wide sections can then be assembled to each other by bowing in the same manner as outlined on page 13. When this method is used panels should be nailed top and bottom as shown in sketch "B" above. The nailed areas are then covered with a molding and base board.

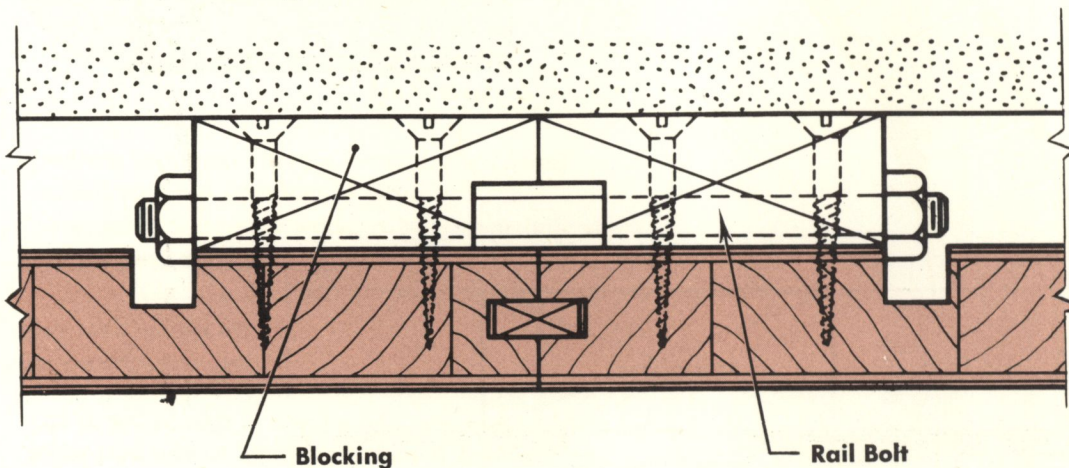

Blocks are screwed and glued to panels

Rail bolts usually 3' o.c. and often have special heads so can be turned with rail set



CURVED SECTIONS

Generally speaking there are three principal methods of obtaining curved sections on architectural jobs.

1. Panels built to template

This is a more expensive but also a more precise method. It requires the construction of both a male and female form, or die. Successive layers of thin veneers are laid up between the dies and held under pressure until the glue has set. Standard practice is to glue the core, crossbanding and back with a cold setting glue, and then do a secondary gluing job with the face and crossband which have been previously Tego bonded.

A variation of this procedure is to bandsaw lumber core stock to the required curvature and apply crossbands and faces to it under pressure. These methods would, of course, entail the cabinetmaker having available the necessary thin veneers and crossbands. An illustration of this method is shown on page 20.

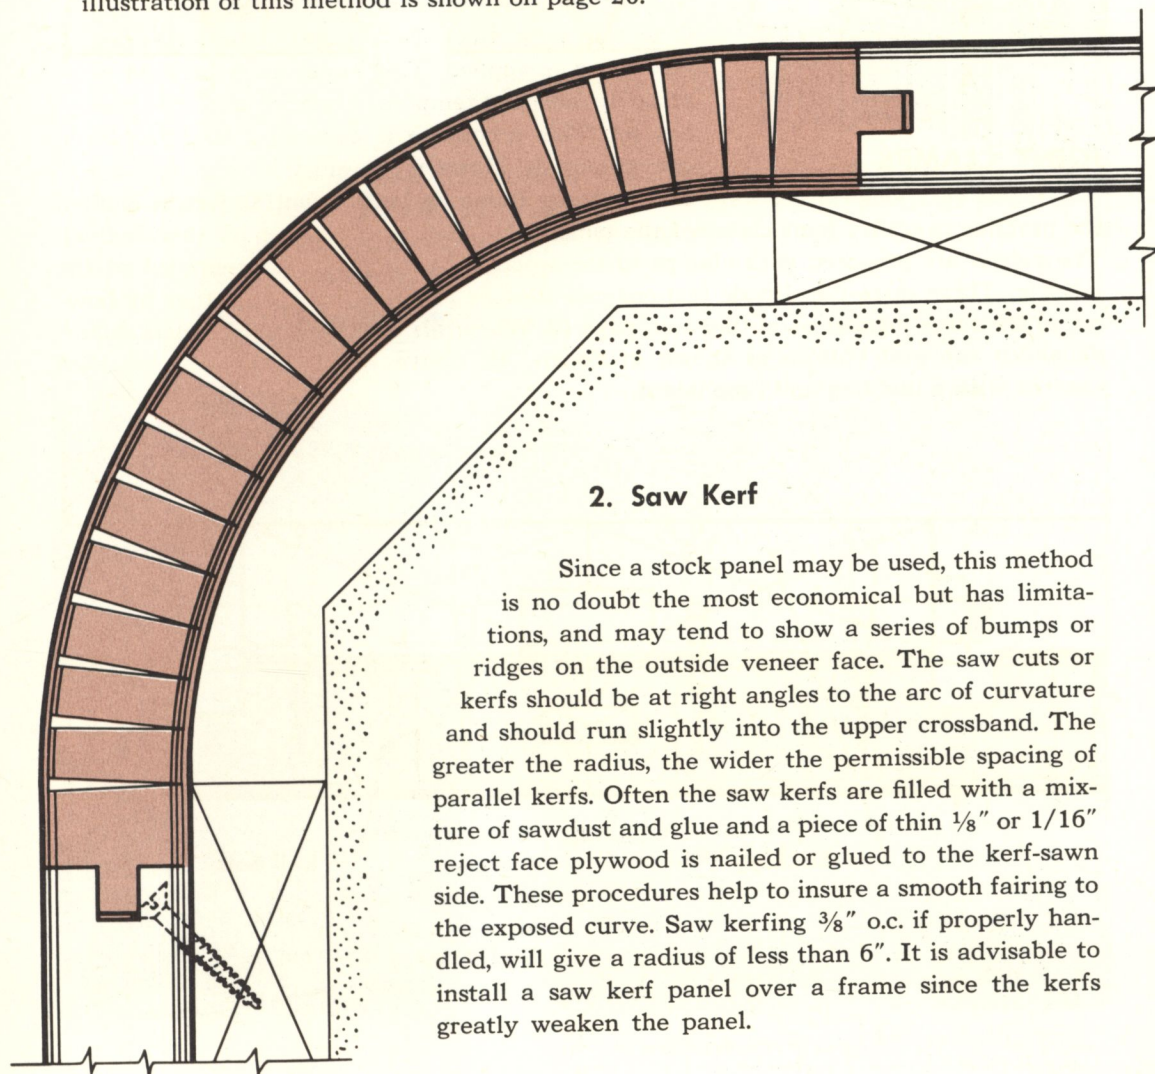
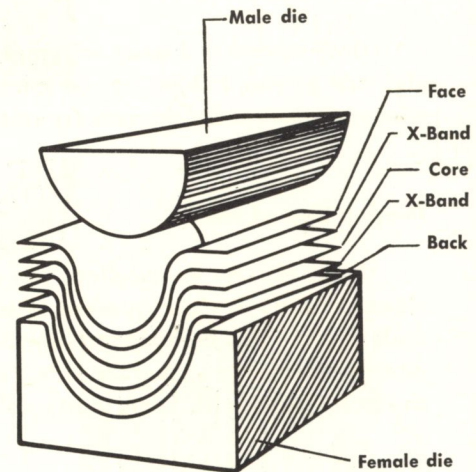


2. Saw Kerf

Since a stock panel may be used, this method is no doubt the most economical but has limitations, and may tend to show a series of bumps or ridges on the outside veneer face. The saw cuts or kerfs should be at right angles to the arc of curvature and should run slightly into the upper crossband. The greater the radius, the wider the permissible spacing of parallel kerfs. Often the saw kerfs are filled with a mixture of sawdust and glue and a piece of thin $\frac{1}{8}$ " or $\frac{1}{16}$ " reject face plywood is nailed or glued to the kerf-sawn side. These procedures help to insure a smooth fairing to the exposed curve. Saw kerfing $\frac{3}{8}$ " o.c. if properly handled, will give a radius of less than 6". It is advisable to install a saw kerf panel over a frame since the kerfs greatly weaken the panel.

Alternate Template Construction

(See page 19)

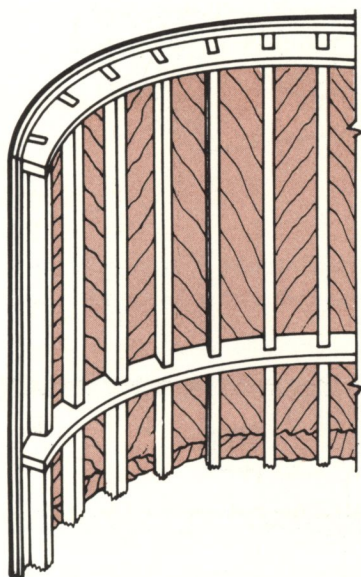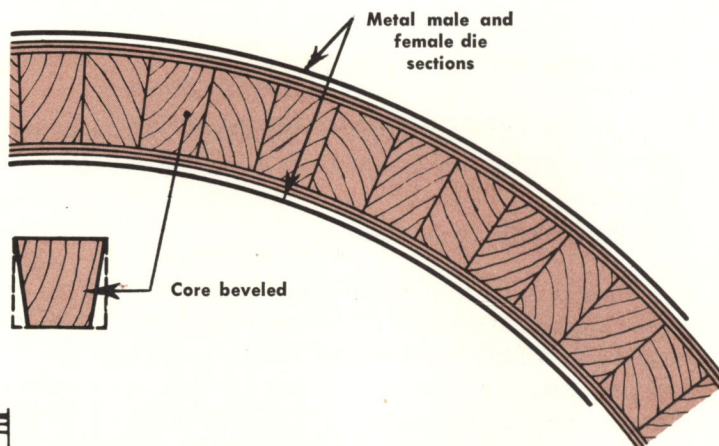

3. Field construction of Curved Sections

This can best be accomplished by erecting a stout framing of 1 x 2's, 2 x 2's or 2 x 3's on centers up to 12" depending on the radius of the curve and with cross members band sawed to contour. To this a $\frac{1}{4}$ " Fir panel is solidly nailed and glued. The entire surface of the panel is then coated with a cold setting glue, preferably Weldwood urea resin. Over this a $\frac{1}{8}$ " thick 3-ply panel of the matching face wood is applied. This panel must be held in place by nails and temporary bracing until the glue has set. This procedure is especially effective on convex curves. However, it must be remembered that a strong frame be built to withstand the pull of the panel.



Fidelity Trust Co., Pittsburgh, Pennsylvania
 Architects & Engineers: Charles M. &
 Edward Stotz
 Millwork by: C. Proessler & Son Co., Inc.


1. Panels should not be cut immediately upon receipt from the warehouse, but should be allowed to remain in the room long enough to adjust themselves to the temperature and humidity of the work room in which the job is being assembled.
2. During periods of extreme humidity, it is best to wait until the panels have had a chance to dry out before attempting to install them to the wall.
3. Never erect a panel installation over fresh plaster. Wood is hygroscopic and will take on moisture from the plaster.
4. Never stand panels on end against a wall for any length of time. If it is not convenient to lay them flat, they should stand on their sides with care being taken not to chip the edges.
5. To prevent moisture from penetrating through the panel to the face, back prime all panels erected over *exterior* plaster walls with one coat of pure white lead and linseed oil before applying to furring. Avoid getting any of the primer on the face of the panels as this would interfere with finishing of the face.

This corner detail is often a solution where long runs are encountered.

SIZES

The size of shop pre-assembled panel sections is actually determined by the size of openings and elevators that these sections must pass through. For instance, the largest section that you can get through a 3' x 7' door is about 7'-3" wide. Elevators provide additional problems, since panel heights are involved here. In some cases panels may be raised on roof of elevator cab. On the other hand, an installation in the ground floor of a new building would permit much larger shop assembled panel sections, since the only limitation would be the capacity of the truck the panels were delivered in, assuming of course, that the entering ground floor doorway were large enough.


Advance consideration to this subject can save embarrassing headaches.

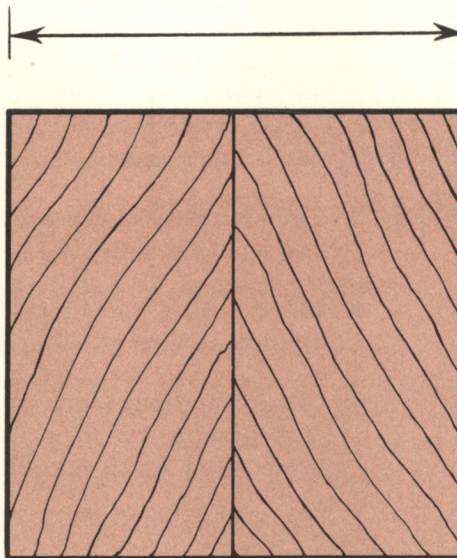

SHOP VS. SITE

In general, it is of major importance to do as much shop work on an installation as possible, and confine field work to the assembly of sections on the job. Not only does this produce better results, but also represents a saving in labor.

Where an installation features a great many curved sections, it is imperative that these be made in the shop, so as to have full control of the precision the shop has to offer as compared with an attempt to do the same job in the field.

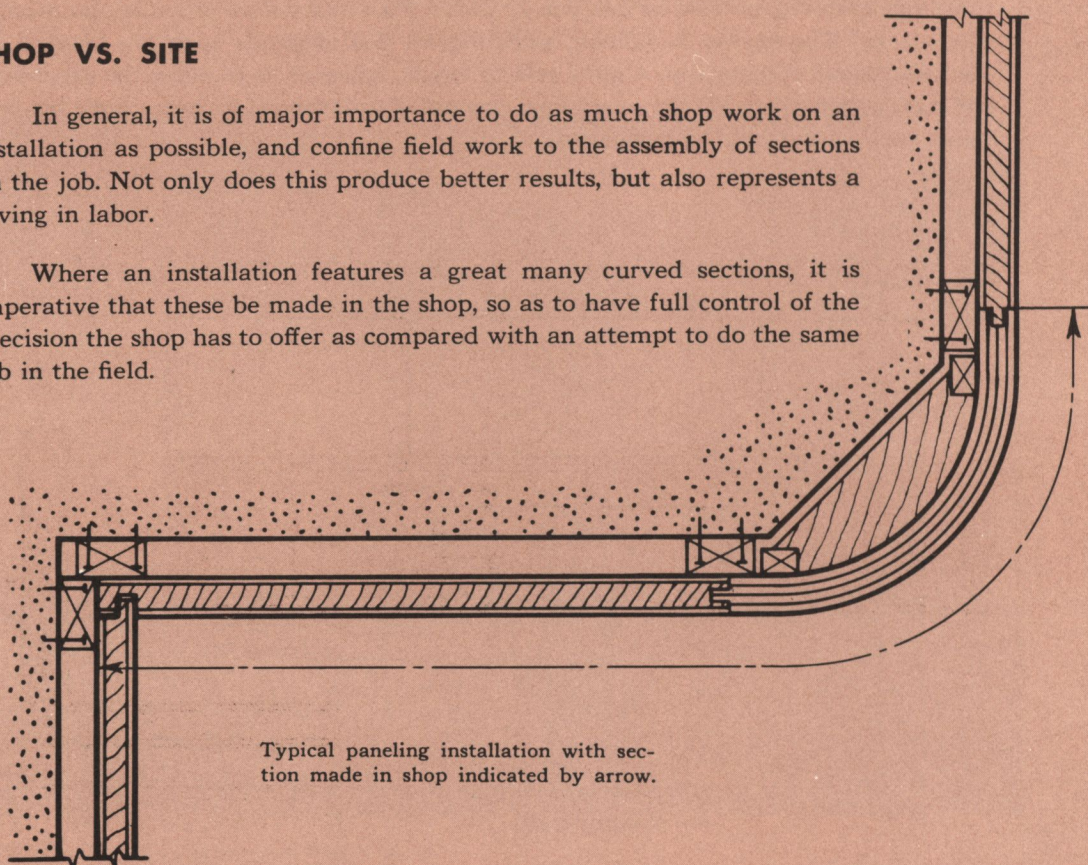

Typical paneling installation with section made in shop indicated by arrow.

FIREPROOFING*

Building code authorities throughout the country are becoming more conscious of fire hazards. Codes are being revised and replaced. New methods of construction and new uses for materials are being recognized and accepted. Fire retardant plywood is such a material and has acceptance under practically every known building code in effect today.

The New York City Administrative Building Code has admitted the use of fire retardant pressure treated lumber for over forty years.

Plywood and lumber can be rendered fire resistant through a vacuum-pressure treatment whereby a combination of salts is impregnated into the cell structure using water as a carrier. Following this processing, the plywood or lumber is then carefully kiln dried. This is necessary to remove all free water. Kiln drying schedules and procedures are necessarily controlled to avoid setting up stresses and eliminating warping and twisting.

There is no restriction regarding the treatment of various thicknesses. The individual veneers may be treated prior to lamination or pre-bonded plywood of any stock thickness may be readily impregnated.

It is important to note that plywood which is to be fireproofed must be of exterior or waterproof grade; otherwise delamination after processing will occur. Interior grades are not suitable for fireproofing.

Salt treated plywood and lumber are slightly more hygroscopic than untreated and should be handled accordingly.

Permanence of treatment is essential. The vacuum-pressure method guarantees complete penetration. The selection of the proper combination of salts is equally essential.


Suggested Specification

Fire retardant plywood. All plywood shall be of an exterior grade. Plywood shall receive a vacuum-pressure treatment, assuring non-corrosiveness and permanent high fire retardance, satisfactorily meeting New York City and National Board of Fire Underwriters' code requirements. All material will be kiln dried after treatment to a moisture content of 9% plus or minus 2%.

For uses in areas where decay and termite infestation prevail, and where Fire Retardant qualities are also desired, the following specification is suggested:

All plywood shall be of an exterior grade. Plywood shall receive a vacuum-pressure treatment, assuring permanency and non-corrosiveness of both toxic and fire retardant chemicals. Toxic chemicals will meet requirements of Specification T2-48 A.W.P.A. Fire Retardant chemicals will meet requirements of U. S. Navy Specifications 51C38, 51C40 and A.S.T.M. Specification E 160-40 and E 69-47.

*Data by Protexol Corporation, Kenilworth, N. J.

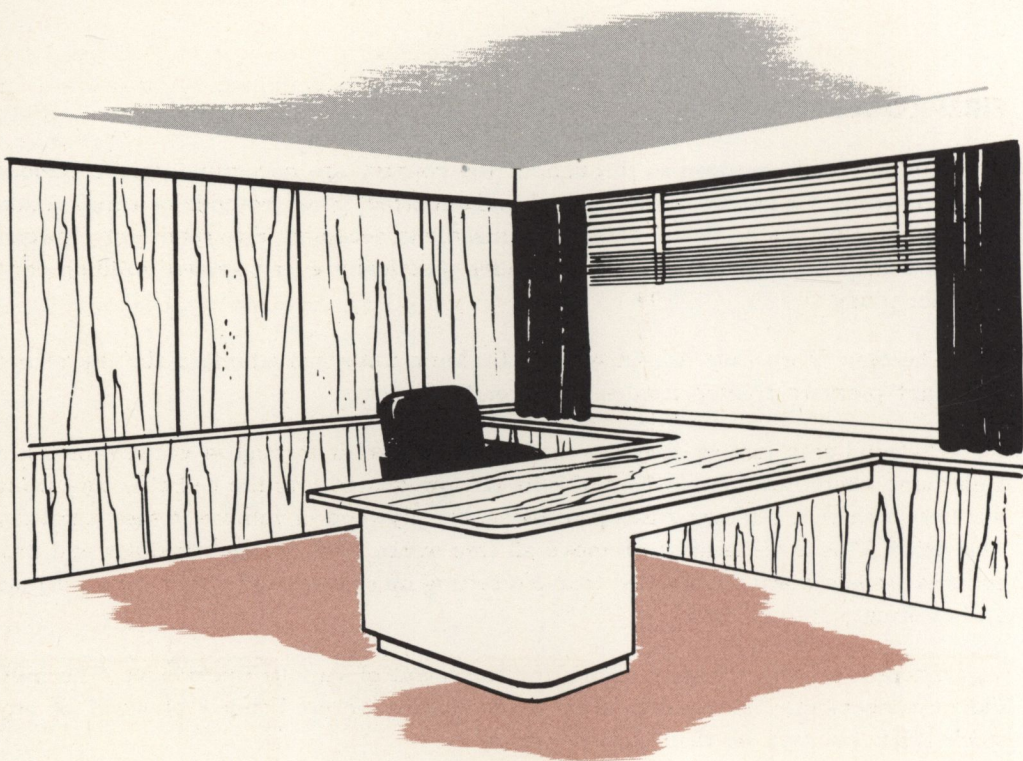


COUNTERFRONTS

Wainscot treatments, whether used alone or in combination with matching wall paneling, can be constructed most advantageously from counterfront stock.

The unique construction (see page 11) of these panels permits widths up to 144".

Since the method of manufacture makes it possible to achieve very long

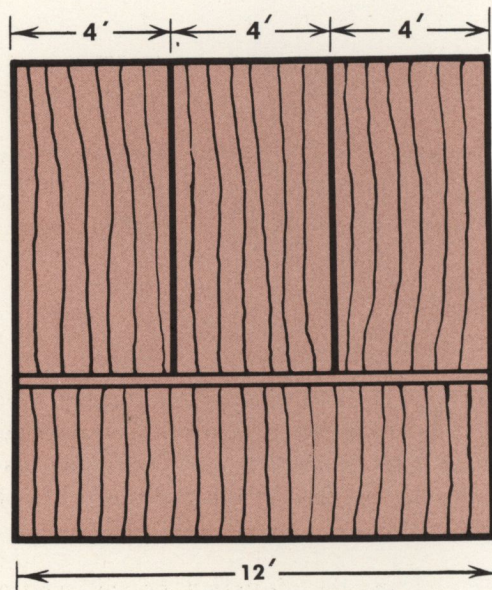

runs in width, the use of counterfronts offers a minimum of visible joints in a given wall area.

Other advantages include the elimination of waste and labor that often result when large size panels are cut down to fit wainscot locations.

The advantages of making counters from counterfront stock need little discussion. A long run of counter can be executed with one piece of material which, since it has sufficient thickness, requires relatively little framing.

FURNITURE

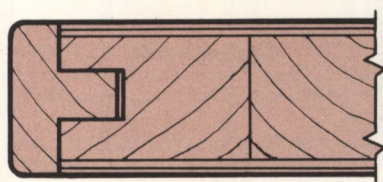
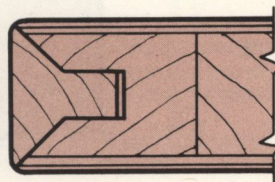
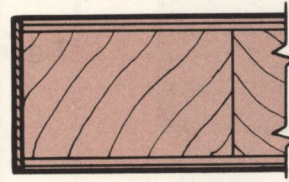
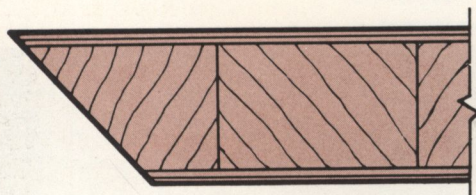
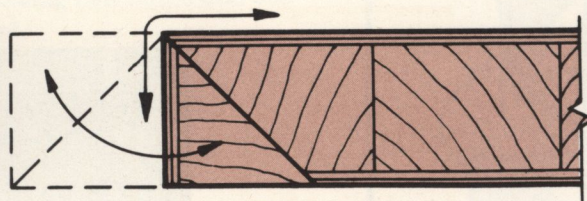
Of principal concern to the architect and designer in detailing built-in furniture, is the problem of concealing the end grain of the plywood. Illustrated are several of the more common ways of overcoming this problem.

Figure #3

Hardwood applied and attached with locking tongue. Leaves exposed $\frac{1}{4}$ " width or so of hardwood. This is a standard preferred method of covering end grain. The hardwood can be Birch or a matching hardwood finished to match.

Figure #4

Matching hardwood rabbetted into plywood end. This method eliminates exposed hardwood on top surface but calls for close fitting in the shop.

**Figure #3****Figure #4****Figure #5****Figure #6****Figure #7****Figure #5**

End of plywood re-veneered. This method calls for careful gluing and clamping to insure getting a good bond.

Figure #6 (Bevel)

In this method, the least expensive one, the raw lumber core is left exposed, and finished by paint or stain to match roughly the face veneer of the panel. The bevel, besides being decorative, tends to put the edge in shadow, and does not call attention to the edge finish.

Figure #7

This is a simple, inexpensive, on-the-job application. A strip approximately $\frac{7}{8}$ " is taken off the panel to be edged, then, after mitreing, it is glued and nailed to the edge. The continuous directional matching of veneer from top surface through edge is an advantage.

*Especially
valuable when
curved surfaces
are encountered*

Corners

There are of course many methods of executing corners for specialized types of furniture. Illustrated here are some of the commonly accepted procedures. Usually it is either desired to make the joint invisible, or to employ a corner block of a matching or contrasting hardwood for decorative effect. For the former condition the splined mitre shown in Figure #8 is the most successful. Another way to achieve this effect is by means of the outside corner joint shown on page 16. When using a corner post (shown in Figure #9), it is always wise to provide means for securely locking it in to the adjacent panels. All of these treatments shown can be glued and clamped together, eliminating face nails.

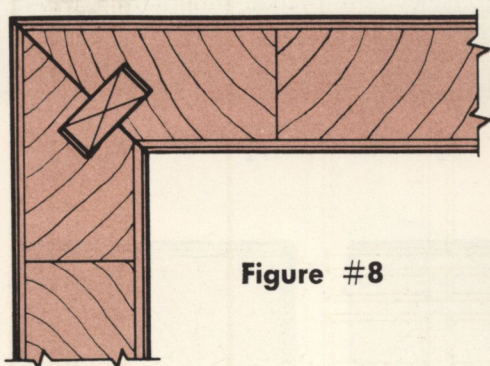


Figure #8

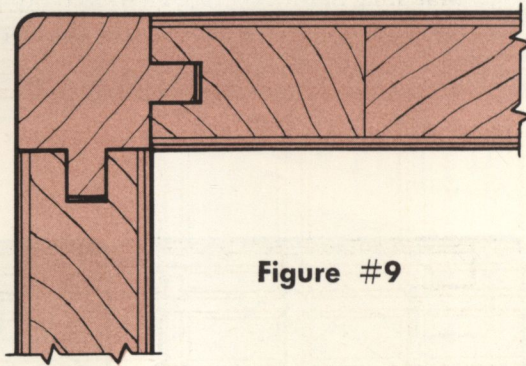


Figure #9




Lingerie Department
Neiman-Marcus
Preston Center, Texas

Dining Room, Mr. & Mrs. George P. Skouras
Greenhaven, Rye, New York
Architect: E. C. A. Bullock
Installer: Payer and Wangermann

CUSTOM STILE AND RAIL


One of the time honored treatments in architectural paneling is the stile and rail and raised panel design. Plywood plays a very important part in producing this traditional effect since the wide widths make economically feasible the raised and recessed portions of the design.

There are, of course, numerous variations on the basic theme, therefore the attempt here has been to show some generalizations in the handling of a design of this type.

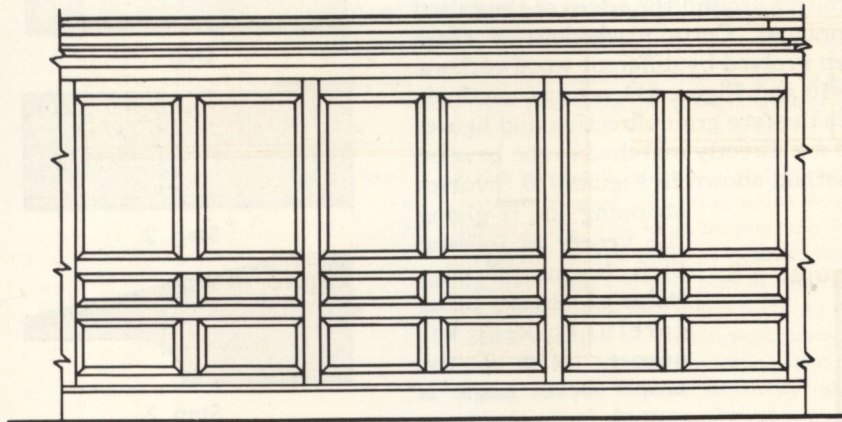


Sketch A

A typical elevation in stile and rail treatment showing two raised and one recessed panel.

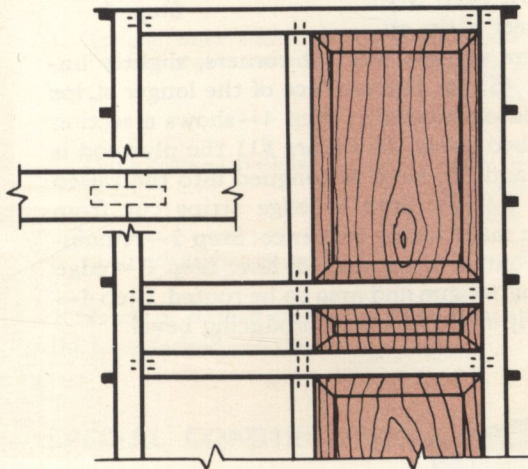

All hardwood stiles and rails are carefully doweled together. Usually two or more width modules are framed together as a unit.

Typical vertical section elements based on elevation (See Sketch A).

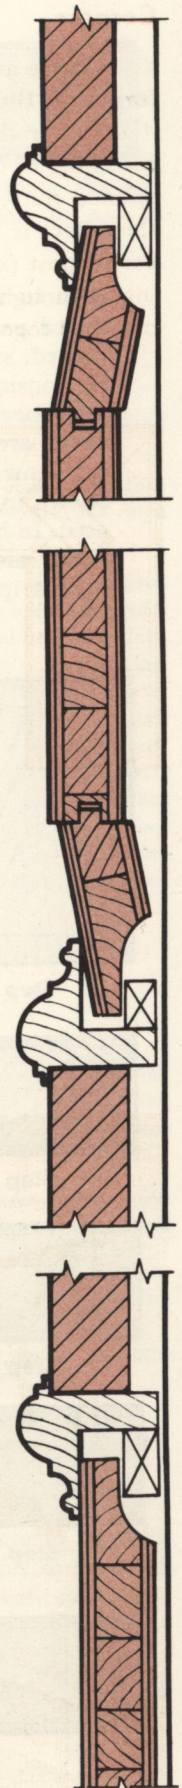


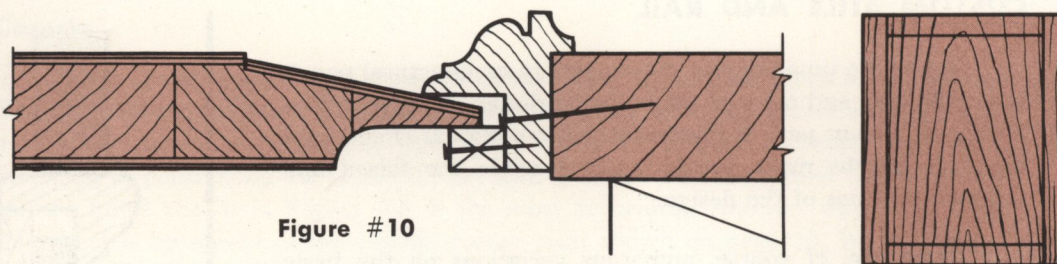



Figure #10

Although plywood is the most satisfactory material for raised panel elements, there are certain problems involved, since the end grain of the panel must always be considered. The problem becomes more difficult when bevels and mitres around the edges of the raised panel are contemplated. Certain solutions of these problems have been evolved by different woodworkers. Shown in Figure #10 and Figure #11 are two methods used. In both cases the face grain direction and figures of the raised panel are directly matched in the beveled edge strip. The method shown in Figure #10 involves

stripping and re-gluing the veneer as follows: Step 1—cut off edge strips of veneer, being careful to keep sequence; Step 2—the proper bevel angle is routed from the lumber core as shown in the dotted line. The lower dotted line shows the material removed in order to tie in with the stile and rail (See Figure #10); Step 3—reglue veneer strip on bevel (where veneers meet at corners, slightly underscore at 45° the bottom face of the longer strips so as to fold over bevel.); Step 4—shows a section of the finished panel. In Figure #11 the plywood is left intact and the bevel is tongued into the raised element as follows: Step 1—edge strips cut from panel, again maintaining sequence; Step 2—remaining panel routed along dotted line. Step 3—edge strip showing tongue and area to be routed. Step 4—the edge strip fitted to panel producing bevel.

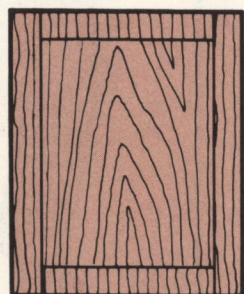


Step 1

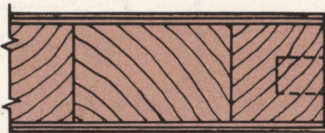

Step 2



Step 3

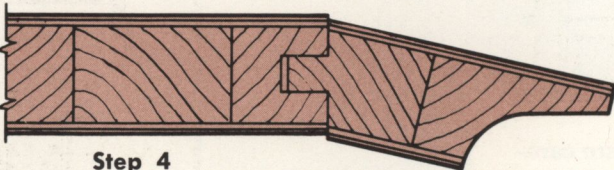

Step 4



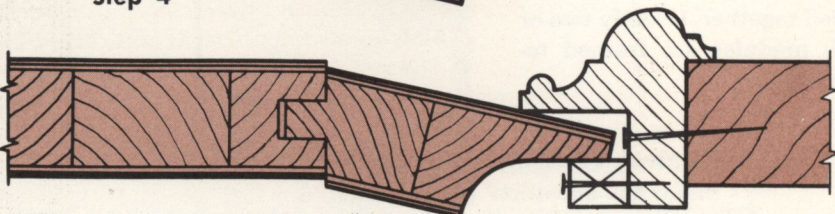


Figure #11


This panel shows where the cuts are made

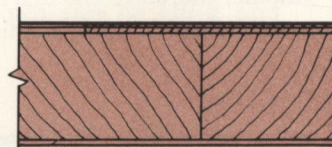


Step 1

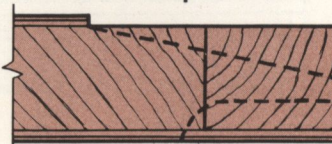

Step 2

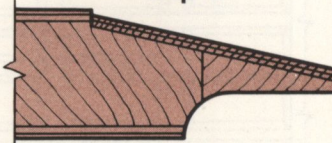

Step 3

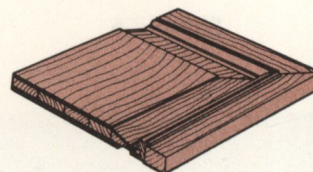

Step 4

FINISHING

It must be stressed very strongly that great care should be taken in accomplishing a satisfactory finishing job. No one but a good hardwood finisher thoroughly familiar with fancy woods should be employed. A beautiful wood panel job can be ruined if the finishes are not applied skillfully. Many woodworkers, of course, have their own methods of finishing but the schedules outlined below may be considered typical of a good system of finishing. We will be very glad to cooperate and answer any questions on the subject upon request. Be sure to state the wood used and the tone and type of finish.

Finish to be Applied in Shop by Means of Spray Equipment

<i>Products Used</i>	<i>Remarks</i>
1. Genuine Silex Paste Wood Filler of shade desired.	It is not necessary to use wood filler on such close grain woods as Birch or Maple.
2. One coat of Sanding Lacquer Sealer.	It is recommended that a light to a medium coat be applied. This coat must be sanded, usually after the sealer has dried an hour or so.
3. One coat of Spraying Lacquer.	The third and fourth coats of Spraying Lacquer must be good quality gloss or eggshell spraying lacquer. Some operators prefer both coats to be gloss lacquer, the last coat rubbed to a gloss, eggshell or dull finish as desired. Others prefer a coat of gloss lacquer, followed by a coat of eggshell lacquer which dries with a rubbed effect. Still others prefer to use eggshell lacquer for both coats and then on certain work, parts like the sides of a cabinet, can be left eggshell unrubbed. But the more prominent parts that meet the eye can be readily rubbed. Also, it is noted that the sanding operations referred to above are quite generally used but there is no question but that the finish is improved by also sanding the filler coat lightly. The operator, of course, can sand also the third lacquer coat, if desired.

Finish for on-the-job Application Brushed on

<i>Products Used</i>	<i>Remarks</i>
1. Genuine Silex Paste Wood Filler of shade desired.	Sand the wood thoroughly using 00 or finer sandpaper. Dust off. Use the filler strictly as per directions. Let dry 24 hours. It is not necessary to use wood filler on such close grain woods as Birch or Maple.
2. Three coats of Satinlac.	Apply first coat, steel wool when dry. Apply second coat, steel wool when dry. Apply third coat, steel wool when dry. This produces a full flush finish.
3. Good quality paste wax.	For a soft attractive sheen, wax with a good quality paste wax.

If blonde or stained effects are desired on either class of work described above, write us. State the tone desired and the wood.

SPECIAL CONSTRUCTION

Although $\frac{3}{4}$ " lumber core construction is usually used where veneers are to be flitch selected and made into finished plywood, occasionally it becomes advantageous to have the selected veneers faced to thinner stock, such as $\frac{3}{8}$ " 5-ply construction. This is particularly true in a panel treatment for the home, since the flitch selected veneer would assure an absolute sequence match, and at the same time installation would be simplified because the $\frac{3}{8}$ " plywood could be nailed and glued to $\frac{1}{4}$ " x $2\frac{1}{2}$ " plywood furring strips, nailed to studs, eliminating the more costly and difficult jointing associated with full $\frac{3}{4}$ " thick paneling.

(See page 18 for recommended nailing schedules, etc.)

Digitized by:



ASSOCIATION
FOR
PRESERVATION
TECHNOLOGY,
INTERNATIONAL
www.apti.org

BUILDING
TECHNOLOGY
HERITAGE
LIBRARY

<https://archive.org/details/buildingtechnologyheritagelibrary>

From the collection of:
Mike Jackson, FAIA

UNITED STATES PLYWOOD CORPORATION

WORLD'S LARGEST PLYWOOD ORGANIZATION

Executive Offices: Weldwood Bldg., 55 West 44th Street, New York 36, N. Y.

U. S.-Mengel Plywoods, Inc.—1215 S. 7th Street, Louisville 1, Ky.

Manufacturers and Distributors of

Weldwood* Hardwood Plywood
Douglas Fir Weldwood
Plankweld*
Mengel Flush Doors
Novoply*
Weldwood Flush Doors
Weldwood Fire Doors
Armorpoly* (metal-faced plywood)

Weldwood Glue and other adhesives
Weldwood Partition Panels
Hardwood Squares
Prefinished Hardwood Panels
Checkerboard Panels
Surfwood*
Armorpoly* Chalkboard
Kalistron*

Weldtex* (striated plywood)
Westinghouse Micarta*
Flexwood*
Firzite* and Satinlac*
Weldwood Moldings
Sliding Door Units

*Reg. U.S. Pat. Off.

DISTRIBUTION UNITS

ALBANY, N. Y. Fuller Road
BALTIMORE, MD. 2020 Mosher St.
BOSTON, MASS. 57 Mystic Ave., Somerville 43
BROOKLYN, N. Y. 89-17 Union Turnpike
BUFFALO, N. Y. 300 Green St.
CHICAGO, ILL. 900 W. Division St.
CHICAGO SOUTH, ILL. 9633 Cottage Grove Ave.
CINCINNATI, OHIO 6225 Wiehe Rd.
CLEVELAND, OHIO 3131 St. Clair Ave.
COLUMBIA, S. C. Laurel & Huger Sts.
COLUMBUS, OHIO 925 Burrell Ave.
CULVER CITY, CAL. 3571 Hayden Ave.
DETROIT, MICH. 6845 Dix Ave.
EAST HARTFORD, CONN. 580 Tolland St.
FRESNO, CAL. 2990 Butler Ave.
GLENDALE, CAL. 4901 San Fernando Rd., W.
GRAND RAPIDS, MICH. 1339 Elizabeth Ave., N. W.
HARRISBURG, PA. 3307 N. 6th St.
HIGH POINT, N. C. Prospect St. at Sou. Railway
INDIANAPOLIS, IND. 1828 English Ave.
KNOXVILLE, TENN. 2734 Middlebrook Pike, N. W.
LOS ANGELES, CAL. 4480 Pacific Blvd.
MILWAUKEE, WISC. 3354 N. 35th St.
NEWARK, N. J. 540 Ferry St.
NEW HYDE PARK, N. Y. 101 Nassau Terminal Road
NEW YORK, N. Y. 806 E. 144th St.

OAKLAND, CAL. 330 Brush St.
OMAHA, NEB. 1806 N. 13th St.
PHILADELPHIA, PA. 1717 N. Delaware Ave.
PHOENIX, ARIZ. 909 E. Madison St.
PITTSBURGH, PA. 941 Behan St., North Side
PORTLAND, ORE. 3333 N. W. Front Ave.
RICHMOND, VA. 707 E. 7th St.
ROCHESTER, N. Y. 1965 East Drive
SACRAMENTO, CAL. 5914 R St.
SAGINAW, MICH. 1901 Rust Ave.
ST. PAUL, MINN. 764 Vandalia St.
SAN DIEGO, CAL. 1346 S. 28th St. at Harbor Drive
SAN FRANCISCO, CAL. 1100 Army St.
SEATTLE, WASH. 13th and W. Nickerson Sts.
SPOKANE, WASH. E. 3508 Riverside Ave.
SYRACUSE, N. Y. 1015 E. Hiawatha Blvd.
WASHINGTON, D. C. 2142 Queens Chapel Rd., N. E.
WEST PITTSBURGH, PA. Tunkhannock Ave. near Baltimore Ave.
TORONTO 14, ONT. 55 Plywood Place
(Weldwood Plywood Limited)

Exclusive Distributors

SALT LAKE CITY, UTAH

Knudsen Builders Supply Co., 203 West 5 South

HONOLULU, HAWAII

Lewers & Cooke, Ltd., P. O. Box 2930

SAN JUAN, PUERTO RICO

Enrique A. Castillo, Inc., P. O. Box 664

SALES OFFICES

ALBUQUERQUE, N. M. 1340 Vassar Dr., N. E.
BLOOMSBURG, PA. Light Street—R. D. #2
CHARLOTTE, N. C. P. O. Box 9171
COUNCIL BLUFFS, IOWA 620 Grace St.
DES MOINES, IOWA 3837 41st St.
JACKSON, MICH. 770 Woodlawn Ave.
LINCOLN, NEB. 1640 S. 38th St.

MARSHFIELD, WISC. 1514 S. Chestnut St.
PEORIA, ILL. 423 St. James St.
PORTAGE, WISC. 522 Prospect Ave.
PORTLAND, ME. P. O. Box 176, Gray, Me.
ROCKFORD, ILL. 1511 Huffman Blvd.
SOUTH BEND, IND. 1803 E. Irvington Ave.
TOLEDO, OHIO 2554 Robinwood Ave.

U. S.-Mengel Plywoods, Inc.—Distribution Units

ATLANTA, GA. 954 Ashby St., N. W.
BIRMINGHAM, ALA. 1230 Second Ave., South
DALLAS, TEXAS 2825 Manor Way
DENVER, COLO. 4511 East 46th Ave.
HOUSTON, TEXAS 330 S. 66th St.
JACKSONVILLE, FLA. P. O. Box 3256, Station F
KANSAS CITY, KANSAS 2935 Chrysler Road
LOUISVILLE, KY. 1943 S. 16th St.

MEMPHIS, TENN. 2191 Person Ave.
MIAMI, FLA. 3545 N. W. 71st St.
NEW ORLEANS, LA. 887 Race St.
OKLAHOMA CITY, OKLA. 4608 No. Cooper St.
ST. LOUIS, MO. 2401 So. First St.
SAN ANTONIO, TEXAS 435 Seguin St.
TAMPA, FLA. Rome & Cypress Sts.